

Primo 60 Open Empire

collapsible bird home

Assembly instructions for the Primo 60 Open Empire

Richtlijnen voor de montage van de Primo 60 Open Empire

Instructions pour le montage de la Primo 60 Open Empire

Aufbau-Anleitung des Primo 60 Open Empire

Instrucciones de montaje de la Primo 60 Open Empire

инструкция по сборке Primo 60 Open Empire



www.savic.be

Ringlaan 10 • B-8501 Heule • Belgium

Tel. +32 56 35 33 45 • Fax +32 56 35 77 30

info@savic.be

Doc.nr.: 931887

SAVIC[®]
pets' favourite


Savic would like to thank you for your purchase and confidence in our Primo 60 Open Empire cage. We can assure you that you have acquired a high quality bird cage.

Due to the size of the cage, we recommend that a minimum of two people is required for assembling this cage.

Please take a few minutes to read your instructions fully to ensure perfect flawless assembly of your Primo 60 Open Empire cage.


Check that you have all the contents as per the list on the following page. If any component parts are missing or damaged do not use your cage.

More information and instruction video on www.savic.be

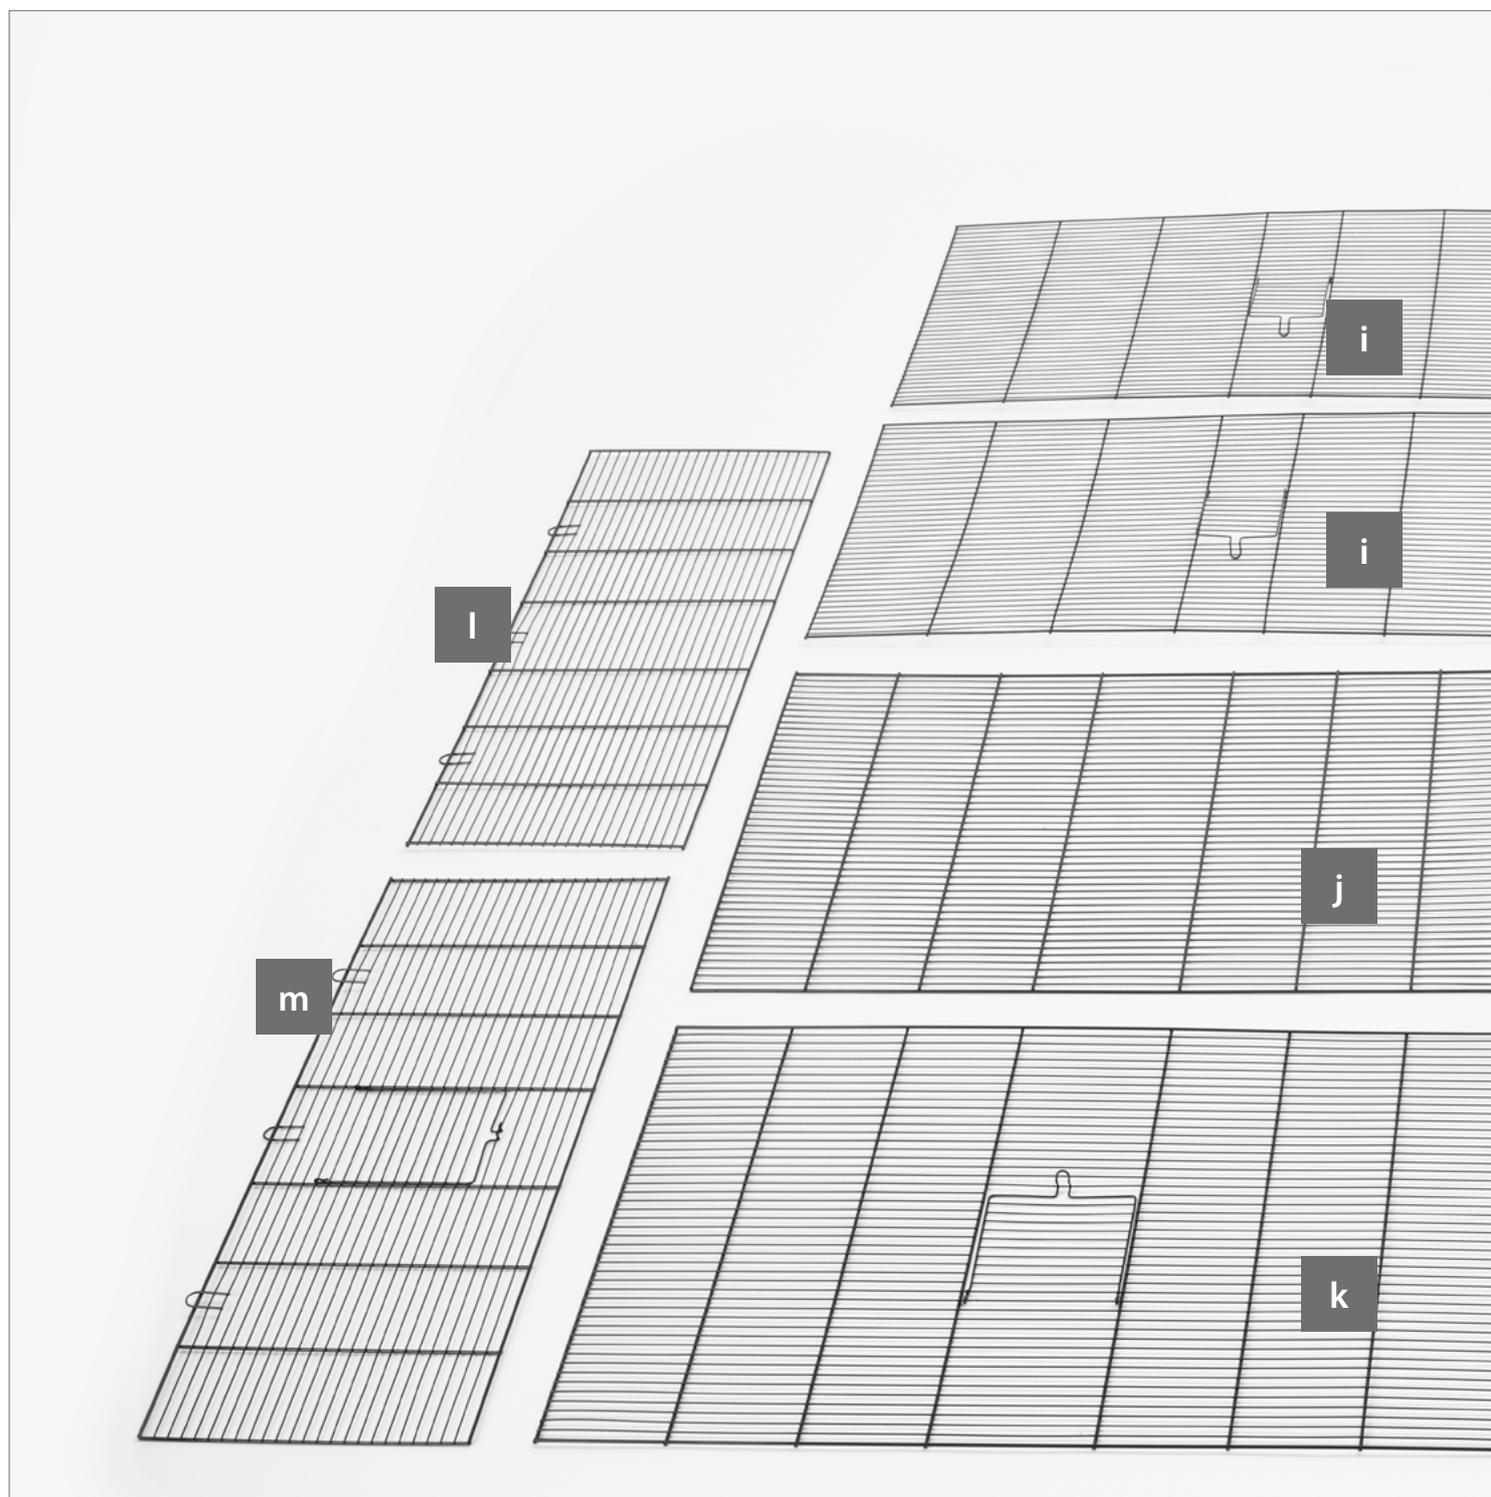


The Primo 60 Open Empire box contains:

- 1 plastic bottom part (a)
- 1 roof panel (b)
- 4 side profiles (c)
- 5 wooden perches (d)
- 4 corner pieces (e)
- 1 bird bath (f)
- 4 feeding bowls + lids (g)
- 1 drinking fountain (h)
- 2 side panels with door (i)
- 1 lower back panel without door (j)
- 1 lower front panel with door (k)
- 1 upper back panel without door (l)

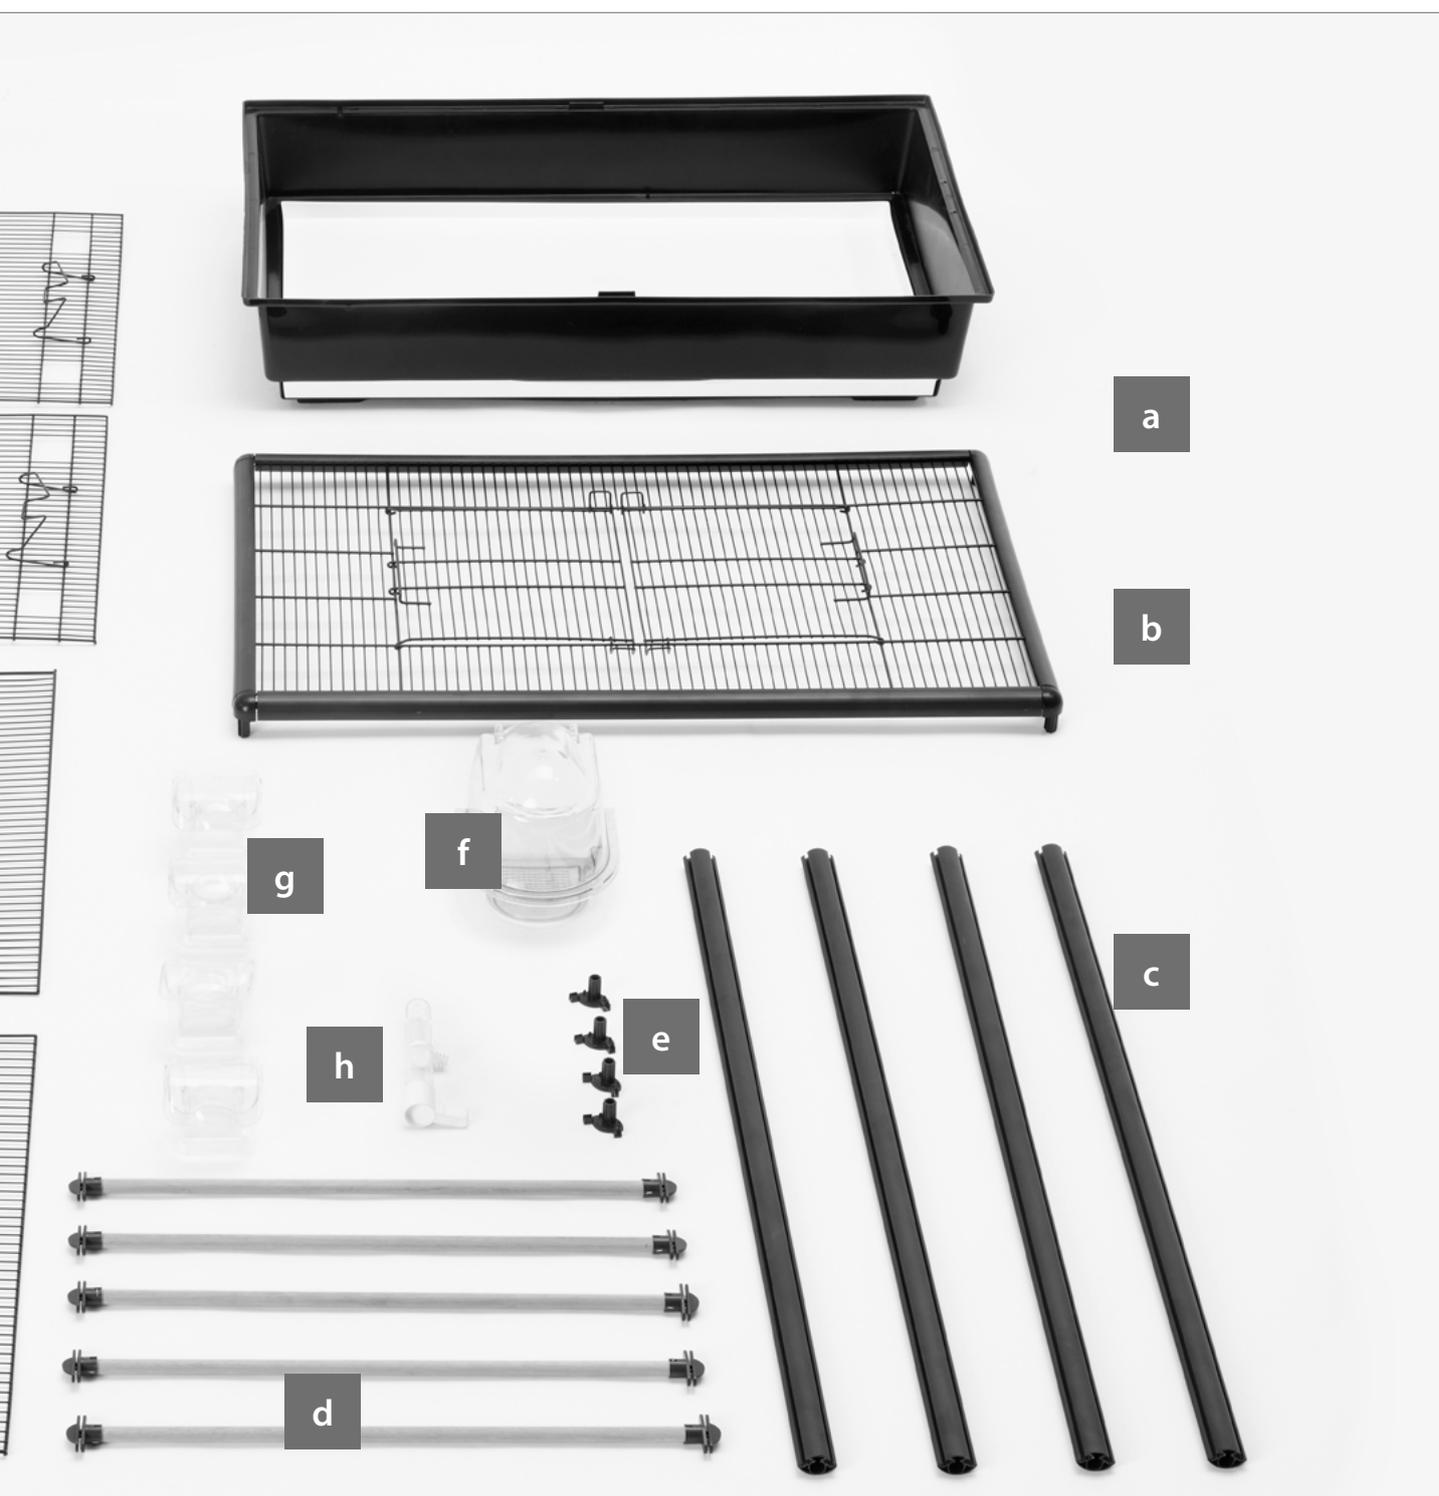





Attach on one side of each of the 4 profiles (c) the 4 corner pieces (e).

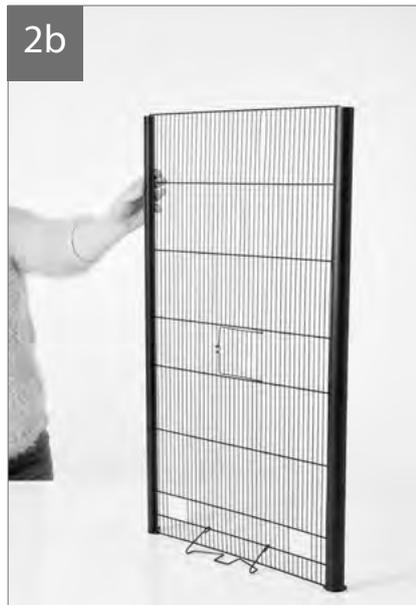



Slide the 2 side panels with door (i) in the vertical profiles (c). Make sure that the closures are facing outwards and the panels are well placed in the corner pieces (e).

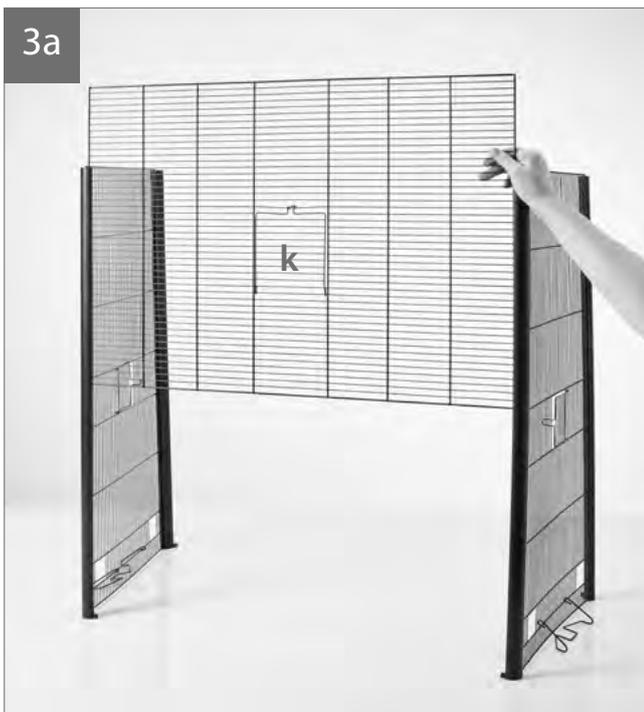



Slide the lower front panel with door (k) into the profiles. Make sure the door is facing upwards and the vertical wires of the panel are facing outwards.

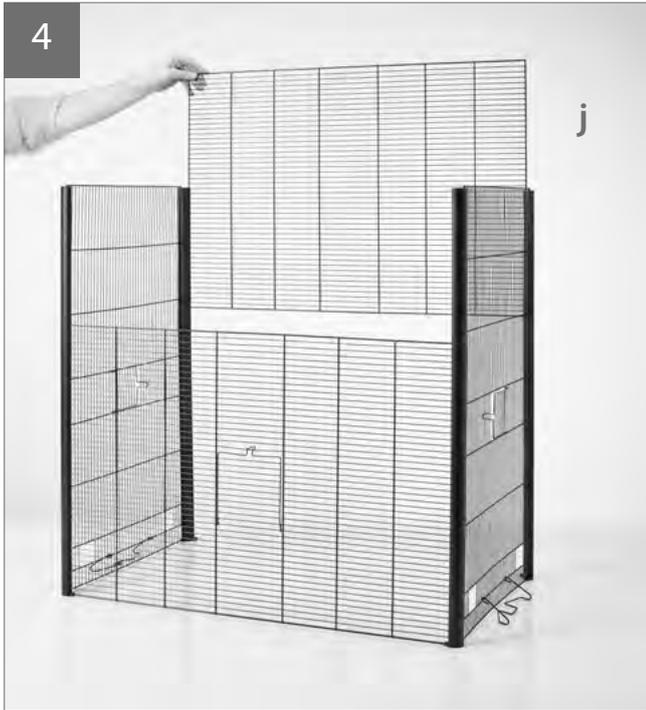


Slide the lower back panel without door (j) in the profiles.
Make sure that the vertical wires are facing outwards.

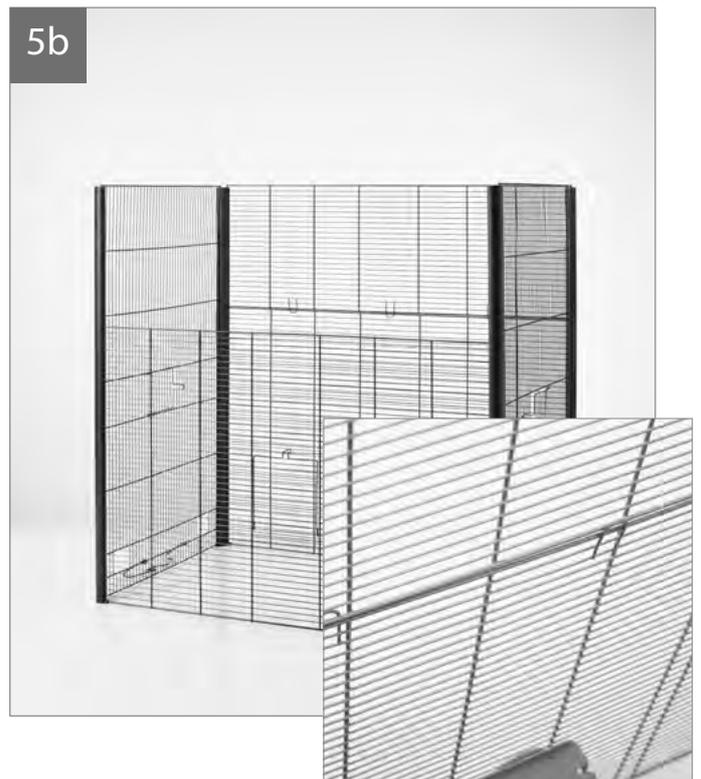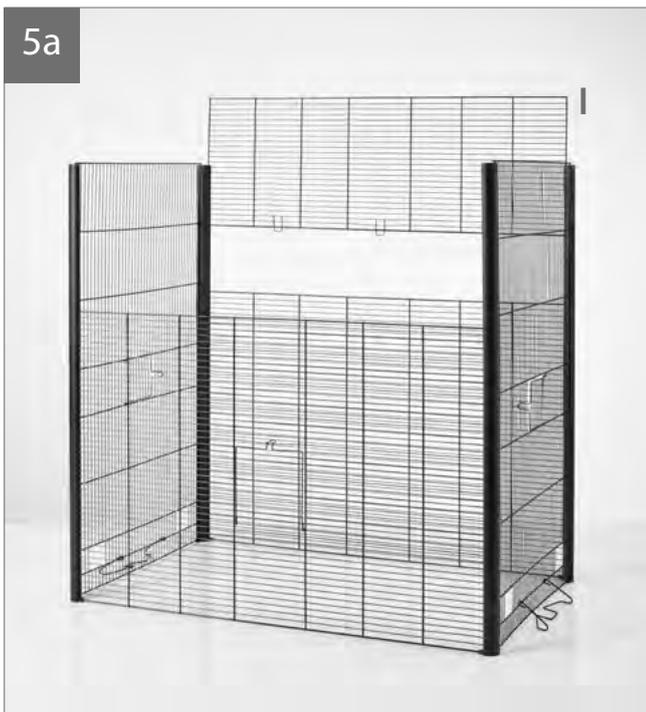



Slide upper back panel without door (l) into the profiles.
Make sure the vertical wires are facing outwards and the panels are assembled as shown.

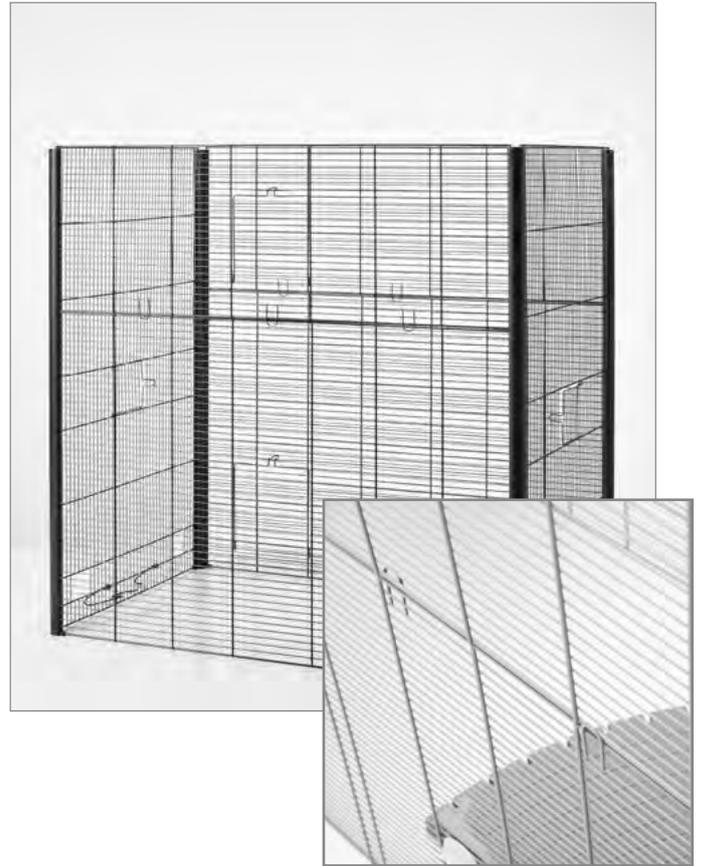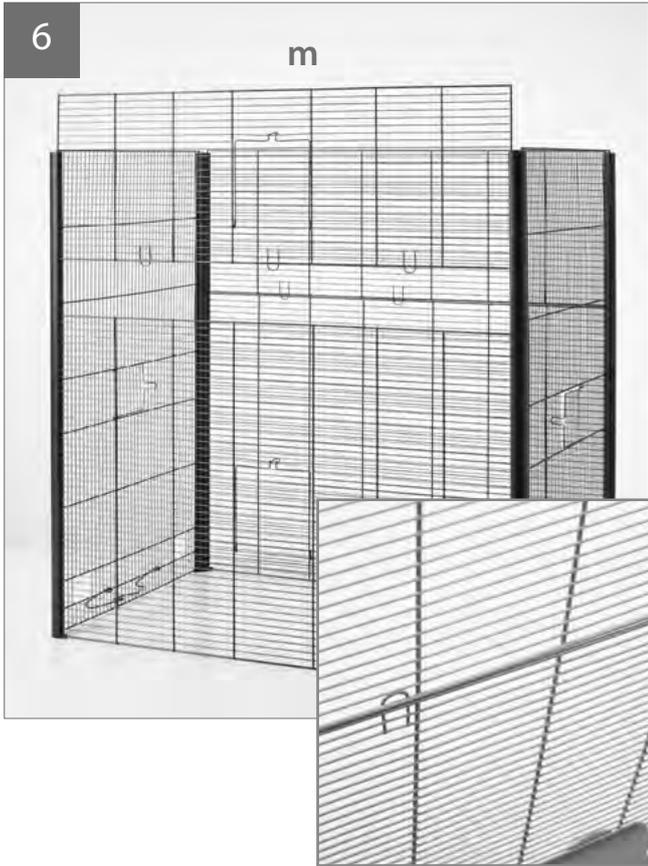


Slide the upper front panel with door (m) into the profiles.
Make sure the door is facing upwards and the vertical wires of the panel are facing outwards.

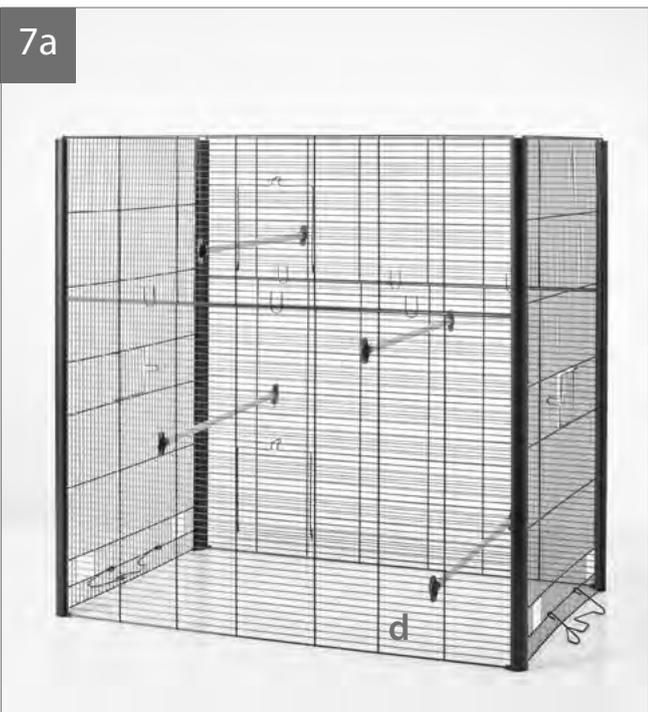

Assemble 4 of the 5 wooden perches (d)

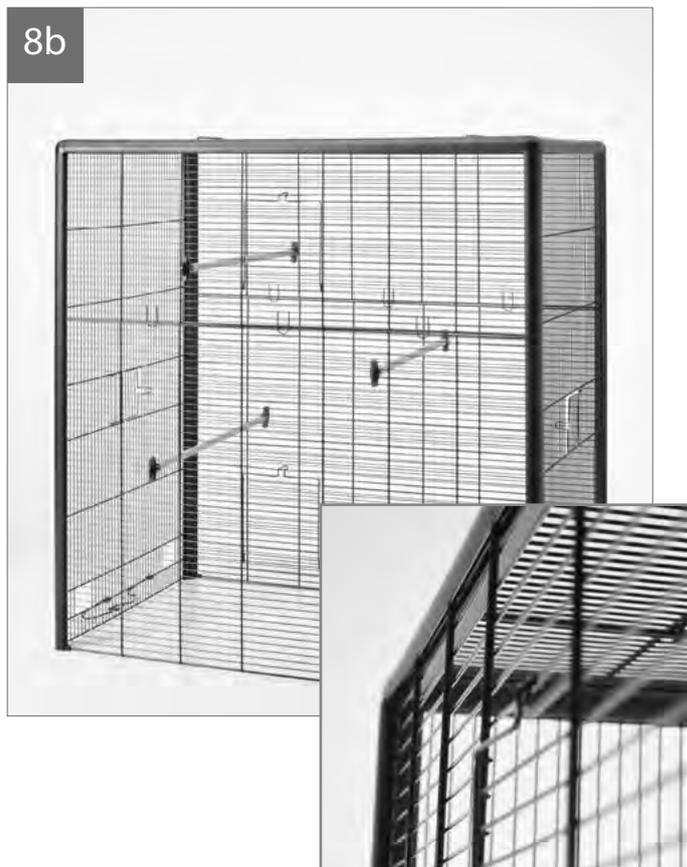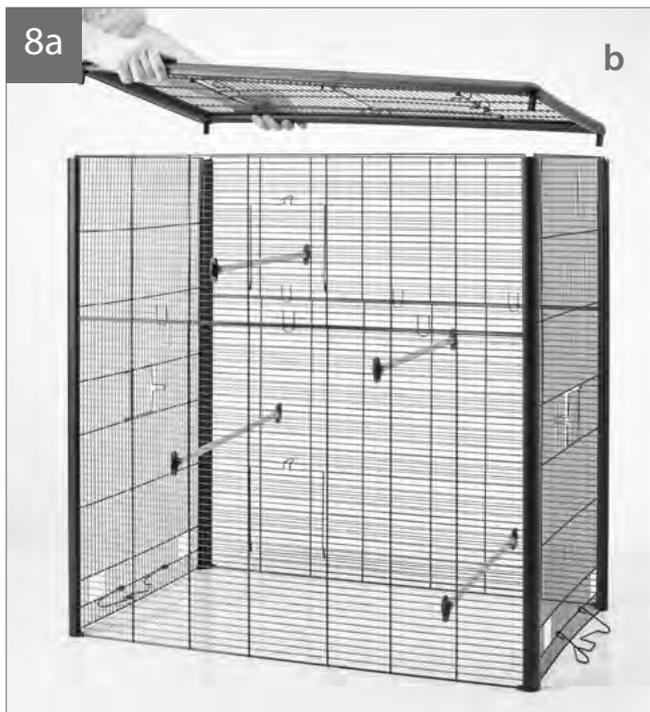

Place the roof panel (b) on top.
 Make sure that the thick horizontal wires of the front, back and side panels are well assembled in the roof panel. (see detail).

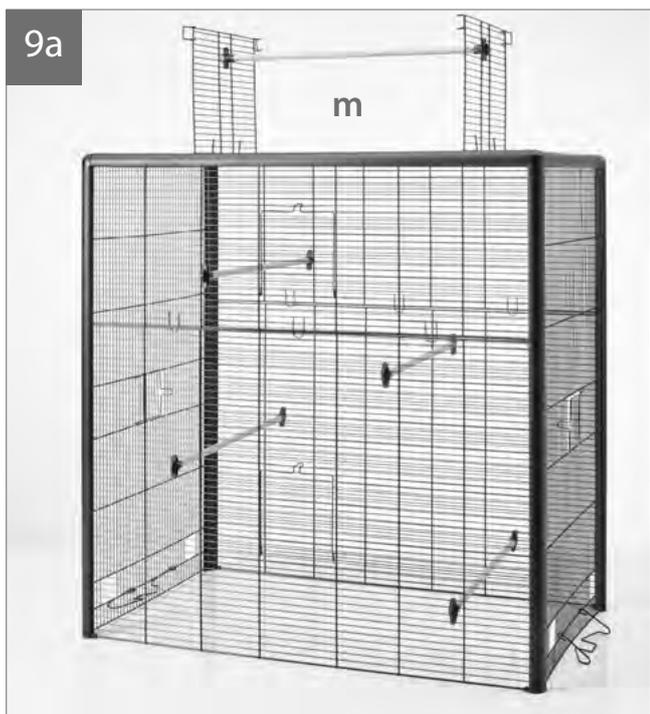

Open the doors of the roof panel and install the 5th wooden perch.
 Put the cage on the tray.



Finally, install the feeding bowls and lid (g+h) on both side panels, the bird bath (f) and drinking fountain (n) and your cage is now ready for use.